

داده پردازی فن آوا

راهنمای تنظیمات مودم
NETIS





ابتدا یک مرورگر باز کرده و در ADDRESS BAR آی پی 192.168.1.1 را تایپ کرده و سپس دکمه ENTER را فشار دهید



بعد از چند لحظه پنجره جدیدی باز شده که از شما Username و Password مودم را درخواست می نماید این مقادیر بصورت پیش فرض guest و guest (با حروف کوچک) وارد نمایید و بر روی Sign in کلیک کنید

Sign in

http://192.168.1.1

Your connection to this site is not private

Username

Password

Sign in

Cancel

پس از ورود به تنظیمات مودم، بر روی Quick Start کلیک کنید

netis®

Select Language: English

Status Quick Start Setup Advanced Service Firewall Maintenance

Device_info

Device_info

ADSL

Statistics

ADSL Router Status
This page shows the current status and some basic settings of the device.

System

Alias Name	Netis Wireless Router
Uptime	0 0:16:38
Date/Time	Sun Jan 1 0:16:38 2012
Firmware Version	RTK V2.1.1
Built Date	Apr 23 2014 15:29:25
Serial Number	00051D030405



سپس بر روی START کلیک کنید.

The screenshot shows the Netis web interface. At the top, there is a navigation bar with tabs: Status, Quick Start (highlighted), Setup, Advanced, Service, Firewall, and Maintenance. Below the navigation bar, there is a 'Quick Start' section with a sub-menu containing 'Quick Start'. To the right, a text box states: "This Modem Router is ideal for home networking and small business networking. The 'Quick Start' wizard will guide you to configure the Modem router to connect to your ISP (Internet Service Provider)." Below this text box, there are two buttons: 'START' and 'EXIT'. A large red arrow points to the 'START' button.

بر روی NEXT کلیک کنید.

The screenshot shows the Netis web interface. The navigation bar is the same as in the previous screenshot. The 'Quick Start' section is expanded, showing a list of four steps: "Step 1. PVC Auto Searching", "Step 2. Set your Internet connection", "Step 3. Wireless network configuration", and "Step 4. Save settings of this ADSL Router". Below the list, there are two buttons: 'NEXT' and 'EXIT'. A large red arrow points to the 'NEXT' button.

۱- در این قسمت مقادیر VPI و VCI متناسب با محدوده جغرافیایی باید ثبت شود. برای دریافت این مقادیر با ما تماس بگیرید.

۲- بر روی NEXT کلیک کنید.

The screenshot shows the Netis web interface. The navigation bar is the same. The 'Quick Start--DSL Setting' section is active. It contains a form with the following fields: "Enable PVC Auto Search:" with a checkbox, "PVC Auto Search Result:" with a sub-section containing "VPI:" and "VCI:" fields. The "VPI:" field has a range of "(0-255)" and the "VCI:" field has a range of "(32-65535)". Below the form, there are three buttons: 'BACK', 'NEXT', and 'EXIT'. Two red arrows point to the 'VPI' and 'VCI' fields, with circled numbers 1 and 2 next to them respectively.



۱- گزینه PPPoE/PPPoA را انتخاب کنید

۲- بر روی NEXT کلیک کنید

netis® Select Language: English

Status Quick Start Setup Advanced Service Firewall Maintenance

Quick Start--ISP Connection Type

> Quick Start

> Quick Start

Select the Internet connection type to connect to your ISP. Click NEXT to continue

<input type="radio"/> Dynamic IP Address	Choose this option to obtain a IP address automatically from your ISP.
<input type="radio"/> Static IP Address	Choose this option to set static IP information provided to you by your ISP.
<input checked="" type="radio"/> PPPoE/PPPoA	Choose this option if your ISP uses PPPoE/PPPoA. (For most DSL users)
<input type="radio"/> Bridge Mode	Choose this option if your ISP uses Bridge Mode.

NEXT EXIT

۱- User Name و Password که شرکت در اختیار شما قرار داده را وارد کنید

۲- گزینه PPPoE/LLC

۳- بر روی NEXT کلیک کنید

netis® Select Language: English

Status Quick Start Setup Advanced Service Firewall Maintenance

Quick Start--PPPoE/PPPoA

> Quick Start

> Quick Start

Enter the PPPoE/PPPoA information provided to you by your ISP. Click NEXT to continue

Username:

Password:

Connection Type : PPPoE LLC

NEXT EXIT



- ۱- در قسمت Access Point گزینه Activated فعال شود
- ۲- در قسمت (SSID) نام وایرلس خود را وارد کنید
- ۳- در قسمت Broadcast SSID گزینه Yes را انتخاب کنید
- ۴- در قسمت Authentication Type گزینه WPA-PSK/WPA2-PSK انتخاب شود
- ۵- در قسمت Password رمز وایرلس مودم را وارد کنید. مقادیر باید حداقل ۸ کارکتر باشد
- ۶- بر روی NEXT کلیک کنید

netis® Select Language: English

Status Quick Start Setup Advanced Service Firewall Maintenance

Quick Start--Wireless Setting

You may enable/disable Wireless, change the Wireless SSID and Authentication type in this page. Click NEXT to continue.

1 Access Point: Activated Deactivated

2 SSID:

3 Broadcast SSID: Yes No

4 Authentication Type:

5 Password: (Please enter ASCII characters between 8 and 63 or Hexadecimal characters between 8 and 64.)

6 BACK NEXT

بر روی NEXT کلیک کنید

netis® Select Language: English

Status Quick Start Setup Advanced Service Firewall Maintenance

Quick Start Completed!!

The Setup Wizard has completed. Click on BACK to modify changes or mistakes. Click NEXT to save the current settings.

NEXT EXIT



بر روی Close کلیک کنید

Select Language: English

netis®

Status

Quick Start

Setup

Advanced

Service

Firewall

Maintenance

> Quick Start

> Quick Start

Quick Start Completed!!

Saved Changes!

CLOSE

